



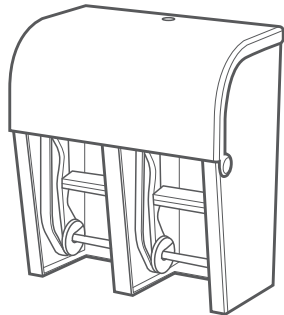



Specification Sheet: 56744A, 56746A, 56747A, 56748, 56744AKB, 56746AKB, 56748KB

Compact Quad® Vertical 4-Roll Tissue Dispenser

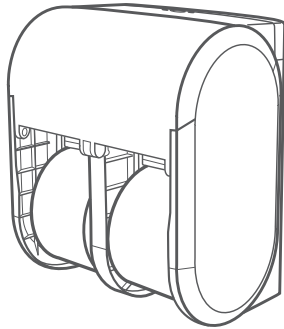

11.65 in
11.6 in
(SKU 56748)


7.30 in
7.1 in
(SKU 56748)

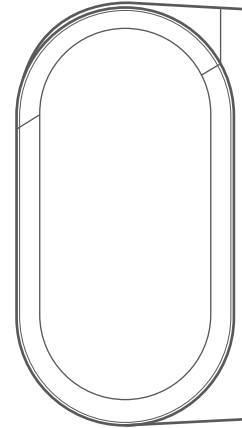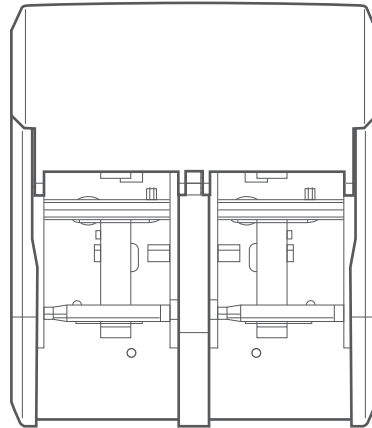

13.62 in
13.36 in
(SKU 56748)


Weight : 3.18 lbs

Specifications: Impact resistant plastic, Stainless Steel (56748), GP combo key

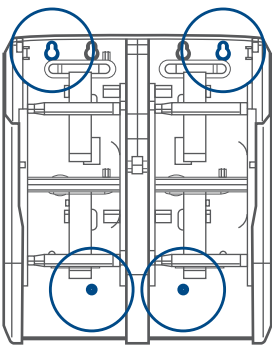

Direct Mount: Position unit on wall so that the top is level. Use key to open front cover and mark screw locations as shown with circles. Secure unit to wall with four (4) anchored screws appropriate to the type of wall in locations previously marked.

NOTE: Top of the dispenser should be at least 3.25" below any grab bars or other objects to ensure clearance for loading.

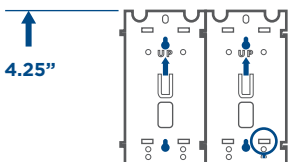

Bracket Mounting: Position unit on wall so that the top is level. Mark locations of shaded areas shown. Assemble two (2) mounting brackets by connecting the sides as shown. With top level and the arrows on the brackets pointing up, secure assembled bracket to wall with four anchored screws using the keyhole slots indicated. Alternatively, peel film from adhesive on the back side and with firm pressure, adhere the mounting brackets to the wall. Fit dispenser on brackets~ engaging all clips as indicated. Lock into place by gently pulling down until a "click" is heard. Mounting should comply with ADA guidelines. Compliance is the responsibility of the installer.

NOTE: Top of the bracket should be at least 4.25" below any grab bars or other objects to ensure clearance for unlocking the unit with the key.

